

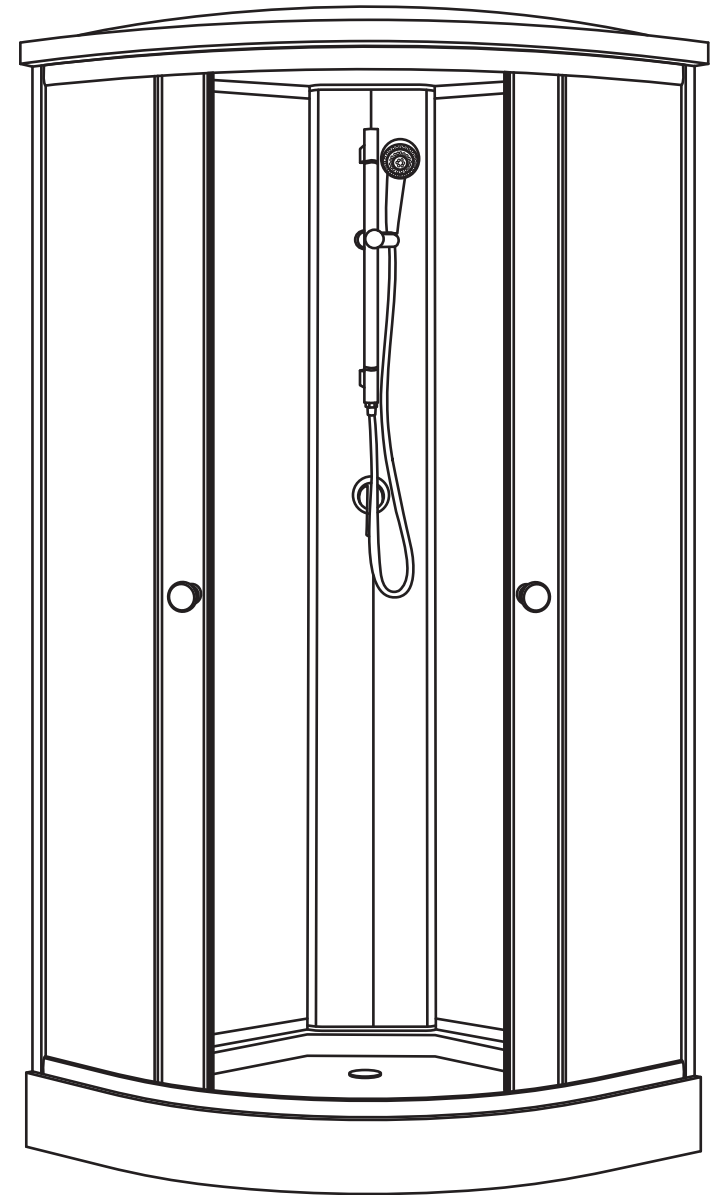





1. USE SCREWS AND NUTS TO FASTEN ROOF AND TRAY.
2. CONNECT THE WATER PIPE TO FAUCET.
3. INSERT THE CONTROL PANEL CABLE CONNECTOR INTO FAN, RADIO, TRANSFORMER CABLE CONNECTOR.
4. SPRAY THE SILICON SURROUND THE ALUMINUM FRAME AFTER FINISHED INSTALLATION. TO PREVENT WATER LEAKING FROM INSIDE OF SHOWER CABIN.




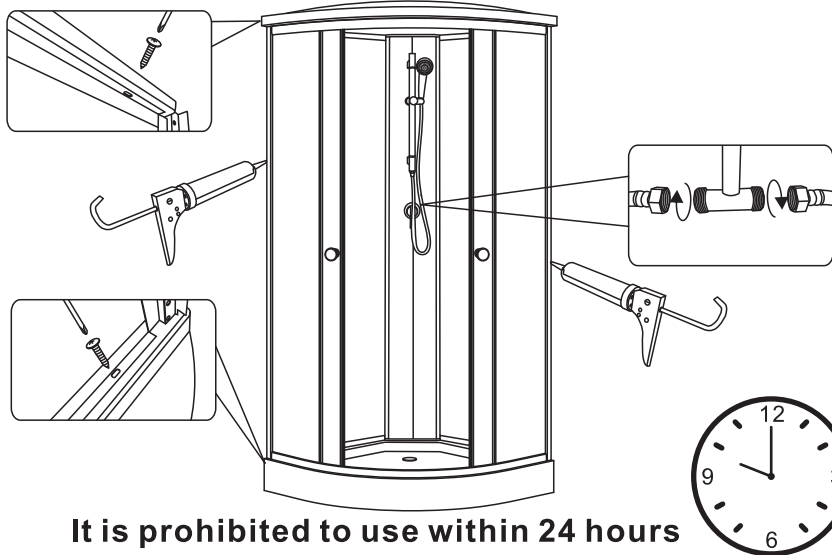



900X900X2100

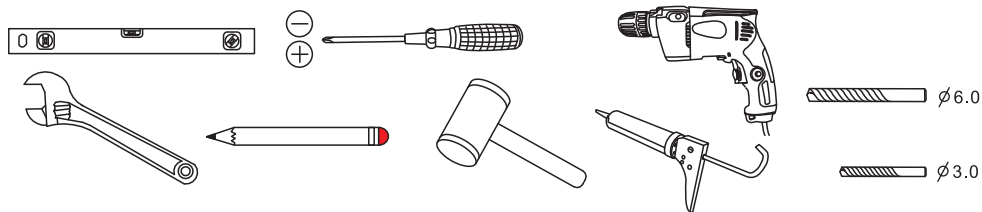



| | | | | | | | | |
|---|--|----|---|--|----|---|--|-----|
| A | | X1 | H | | X1 | O | | X1 |
| B | | X1 | I | | X4 | P | | X16 |
| C | | X2 | J | | X2 | Q | | X8 |
| D | | X2 | K | | X4 | R | | X4 |
| E | | X2 | L | | X4 | S | | X12 |
| F | | X1 | M | | X1 | | | |
| G | | X1 | N | | X2 | | | |

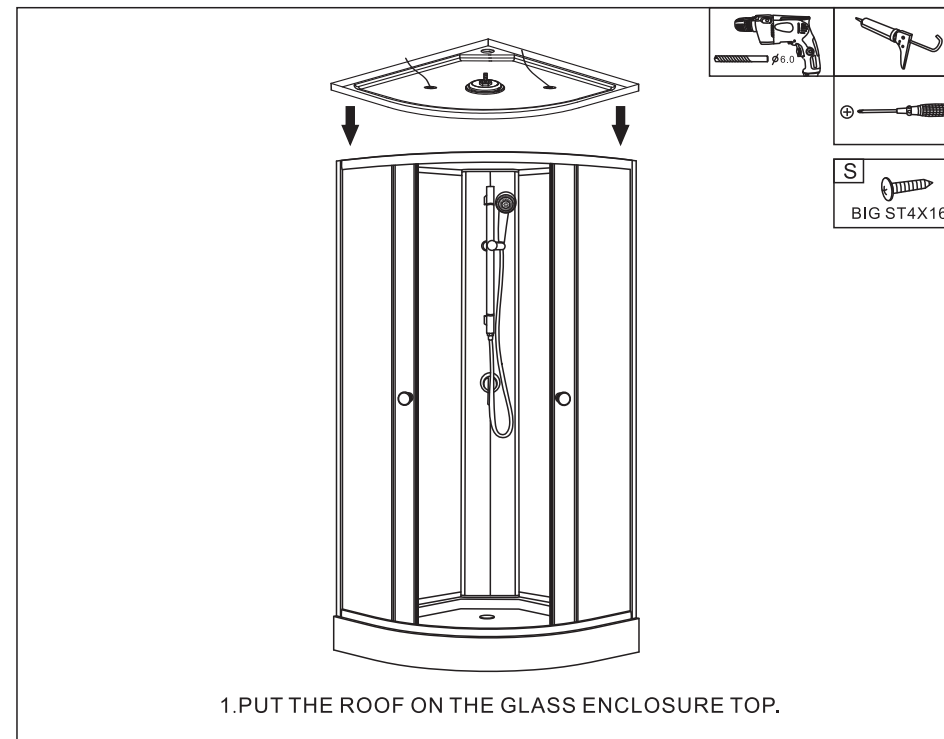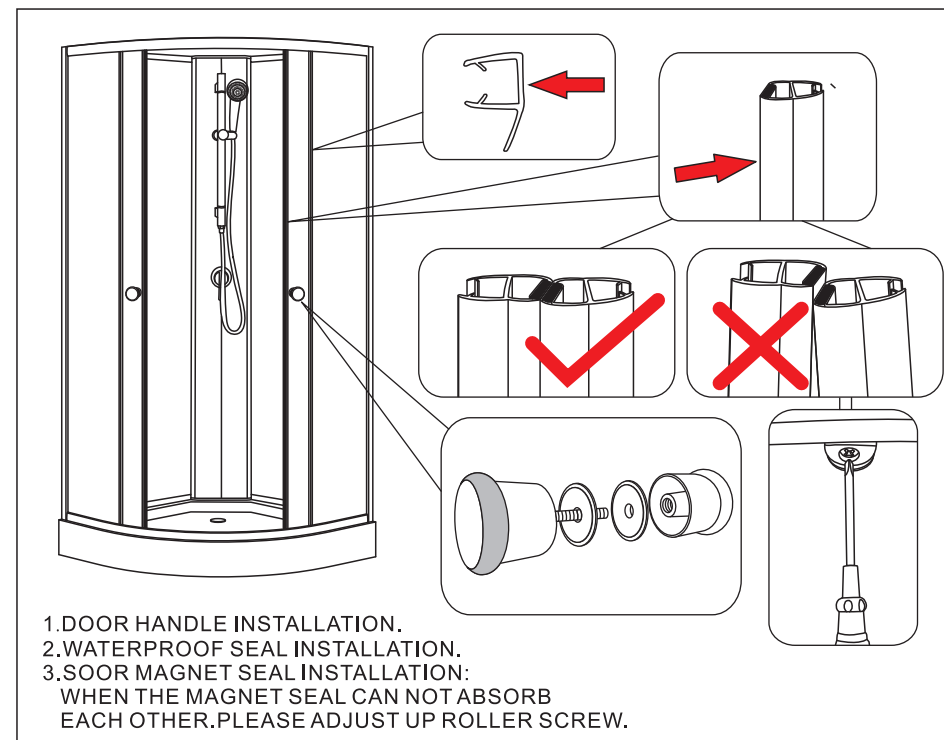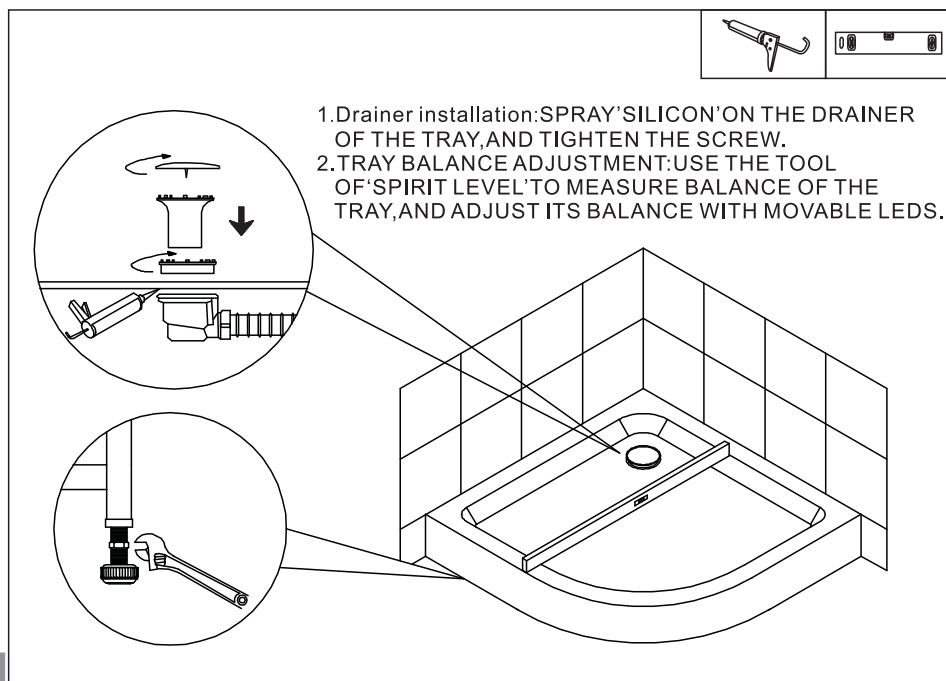

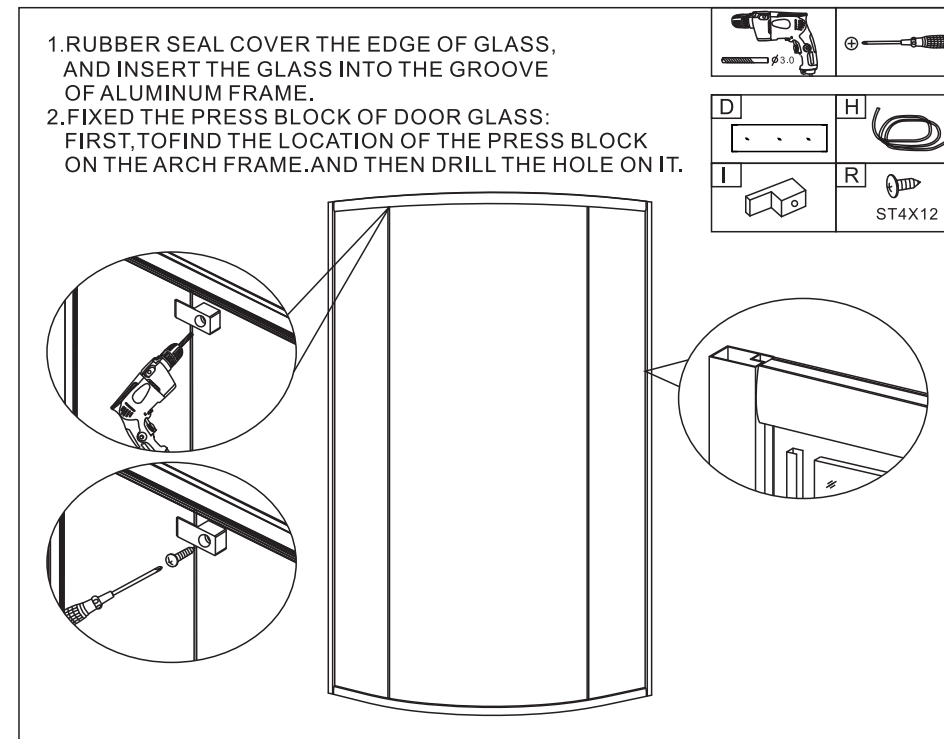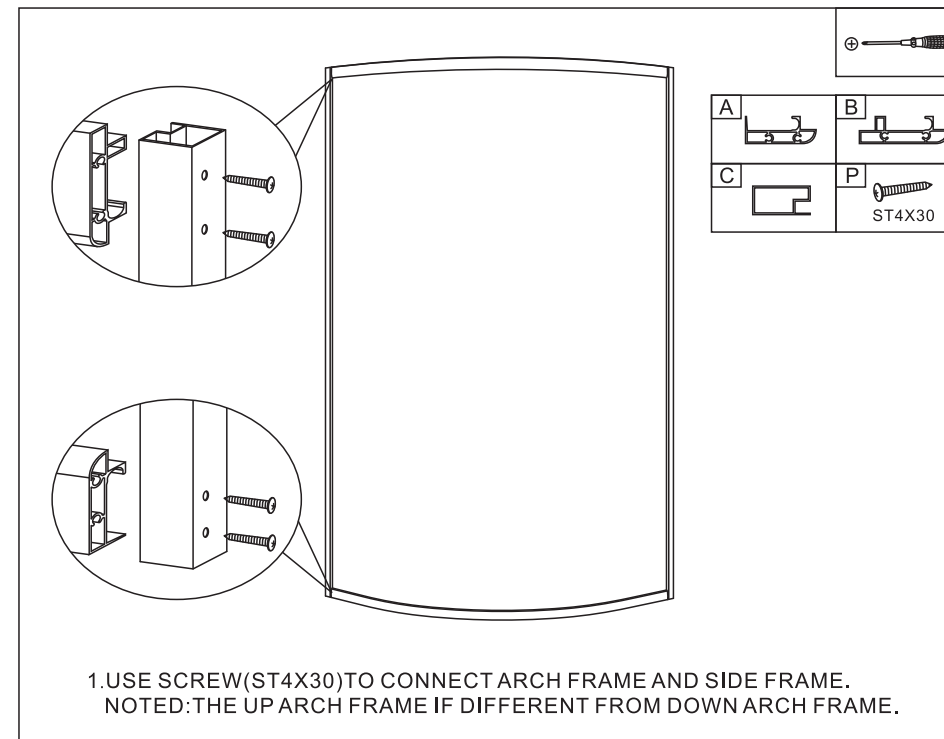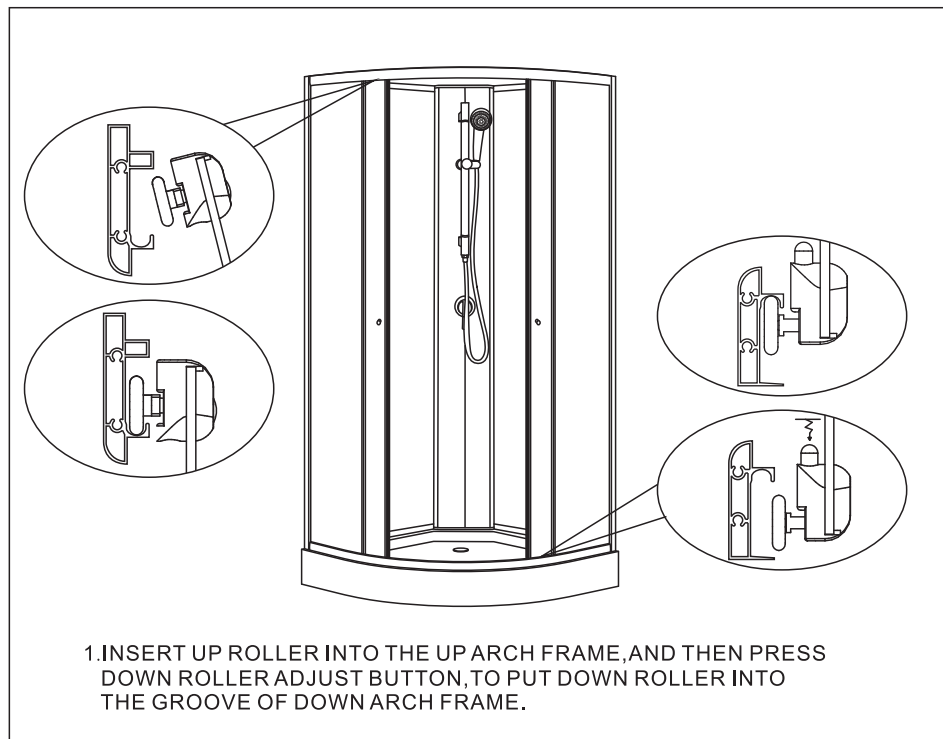
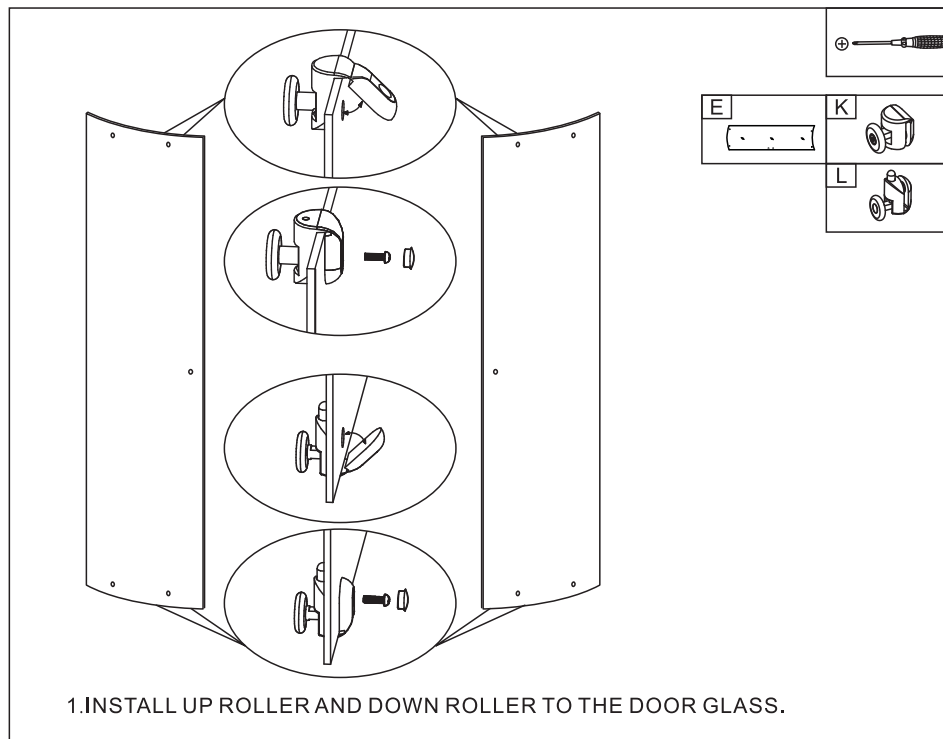


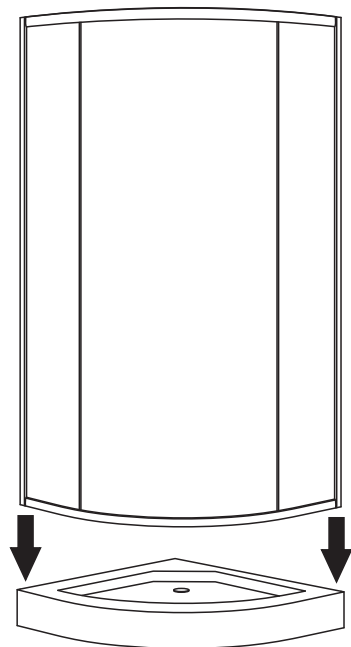

1.PUT THE INSTALLED GLASS SHOWER ONTO THE TRAY.

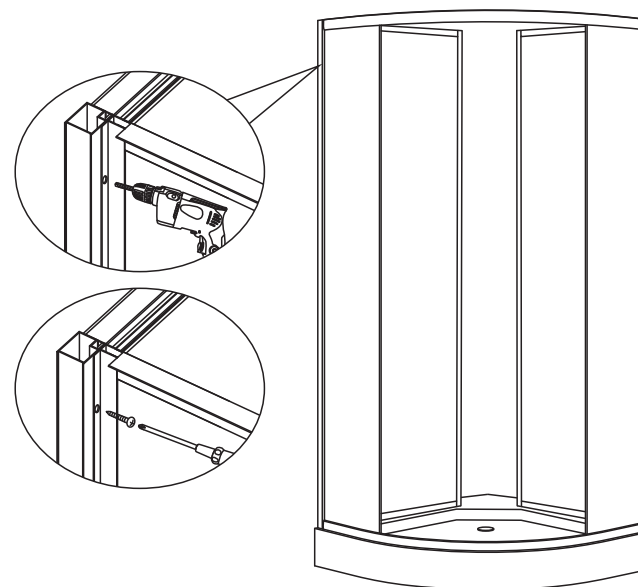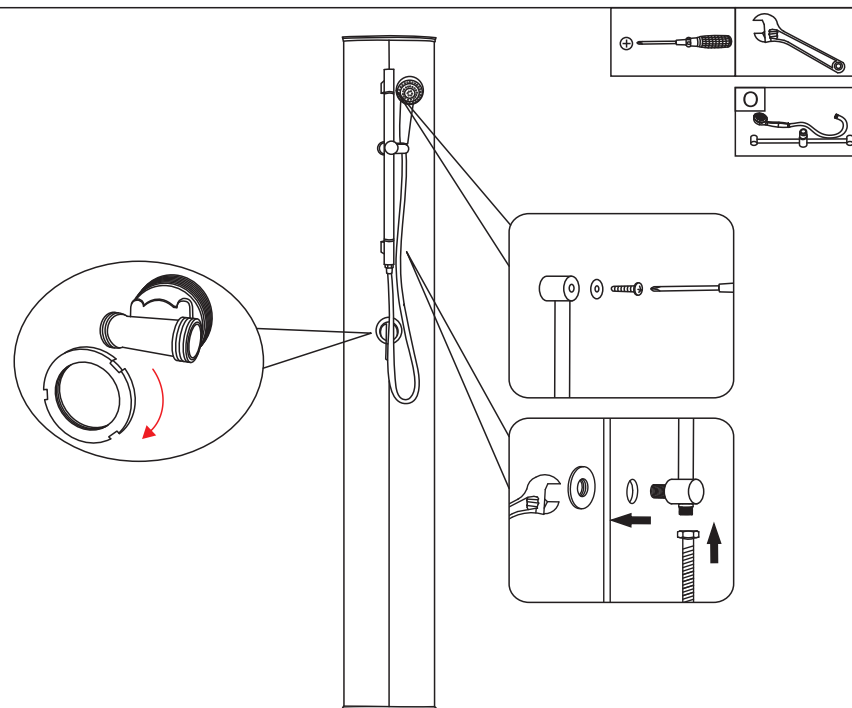

1.CONNECTION THE FINISHED BACK WALL WITH FRONT GLASS STRUCTURE.

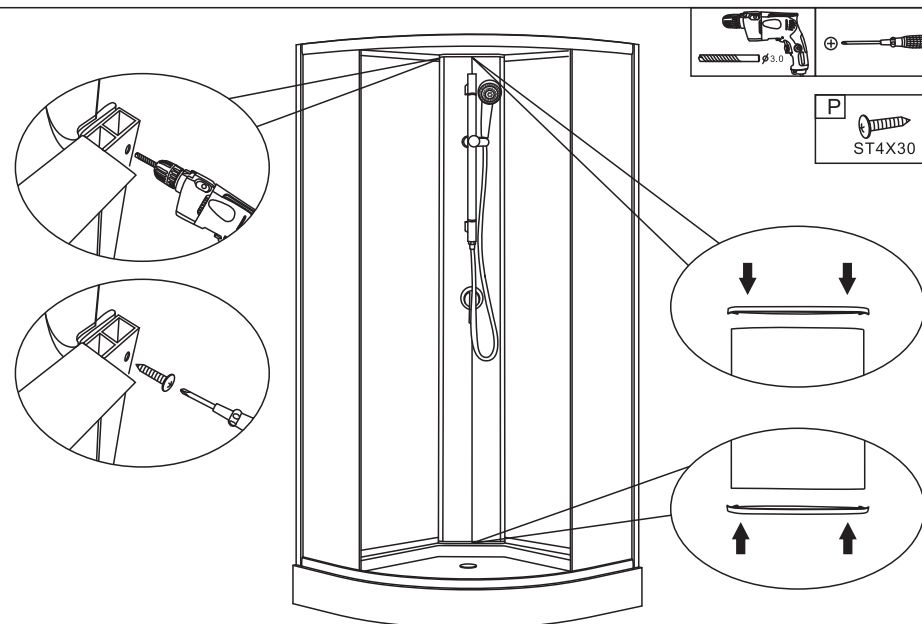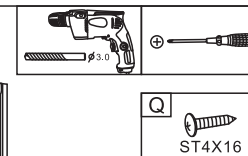

1.INSERT PLASTIC DECORATE STRIP INTO BACK PANEL BOTH ENDS.
2.CONNECT BACK PANEL WITH BACK WALL, FIRST DRILL HOLES ON BOTH ALUMINUM FRAME, AND THEN FASTEN THEM WITH SCREW(4X30).

