

Cleaning&Maintenance

Clean the sundries regularly to prevent the drain from being jammed.


Usually, clean shower enclosure by mop with mild detergent.

Don't clean the shower enclosure with irritant detergent. such as alcohol, gasoline or other chemical cleaner.

Should there be any dirty stains on the shower enclosure, you may clean it by calico with toothpaste, but you need to clean it with water afterwards.

After the installation is completed, if you find there is much noise when the glass door moves, you may add small quantity of lubricant onto the roller wheel, slipping hook and the track.

INSTALLATION GUIDE

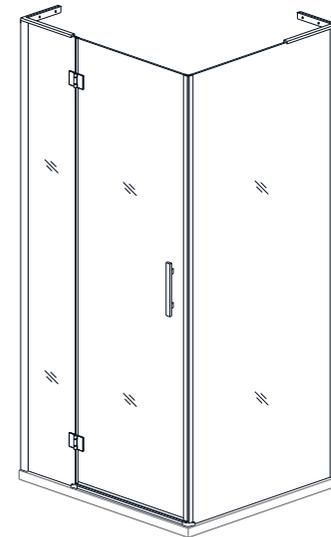


♡ Please refer to the instructions according to the style you buy!

Thanks for choosing our products,we'll provide best service for you.Please carefully read the whole manual before installation and use.

CONTENTS


Part Lists -----	1
Determine the right place -----	3
Fixed aluminum inter casing -----	4
Installation of Open glass door and Hingle-----	6
Complete the installation -----	9
Cleaning&Maintenance-----	10

5) Complete the installation

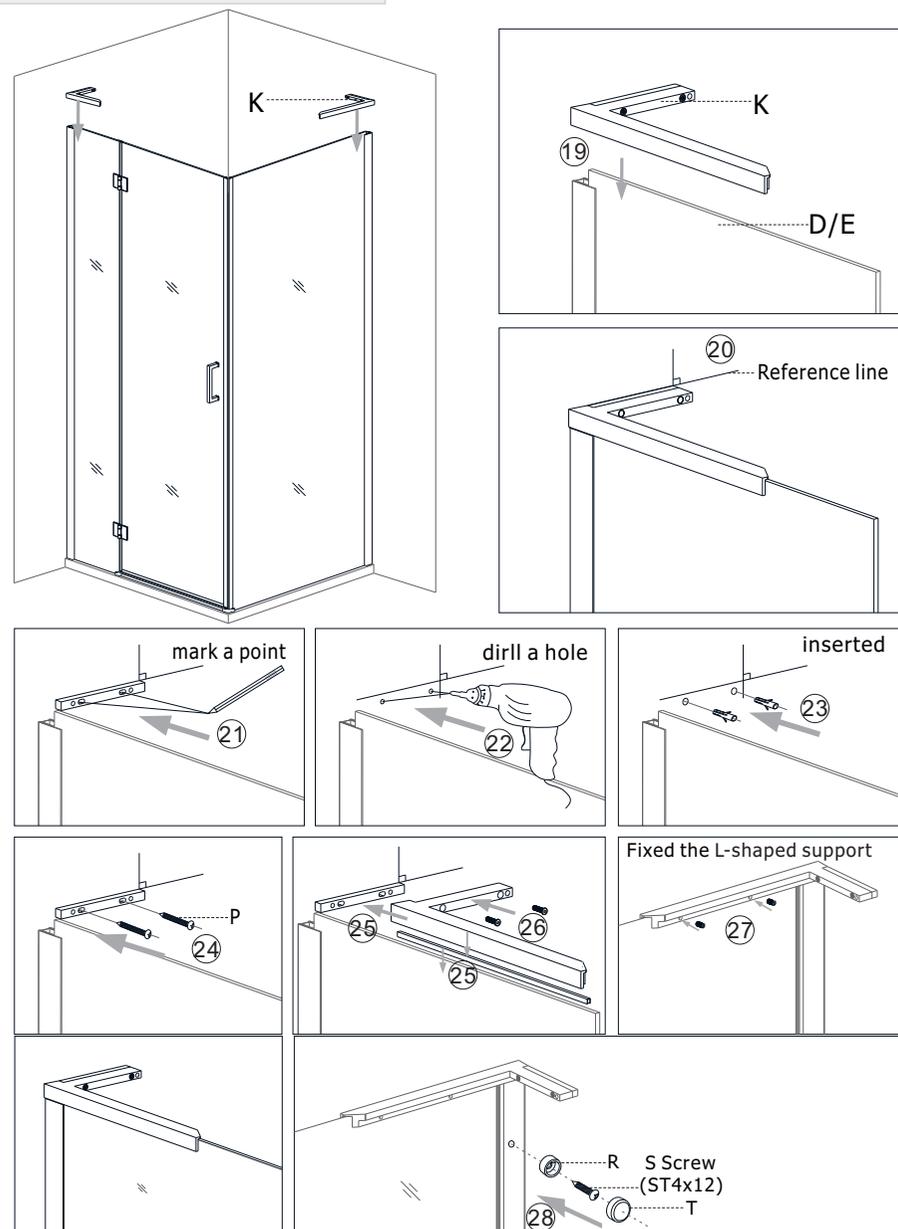

- 5.1) See the picture ,and then install well the L shape zinc alloy support parts ,and fasten it and make sure it is stronger ,
- 5.2) Then fix the aluminum profile each side by screws and put its cap .


In case there are some different between picture and produces,please take the products as standard or referto the sample!

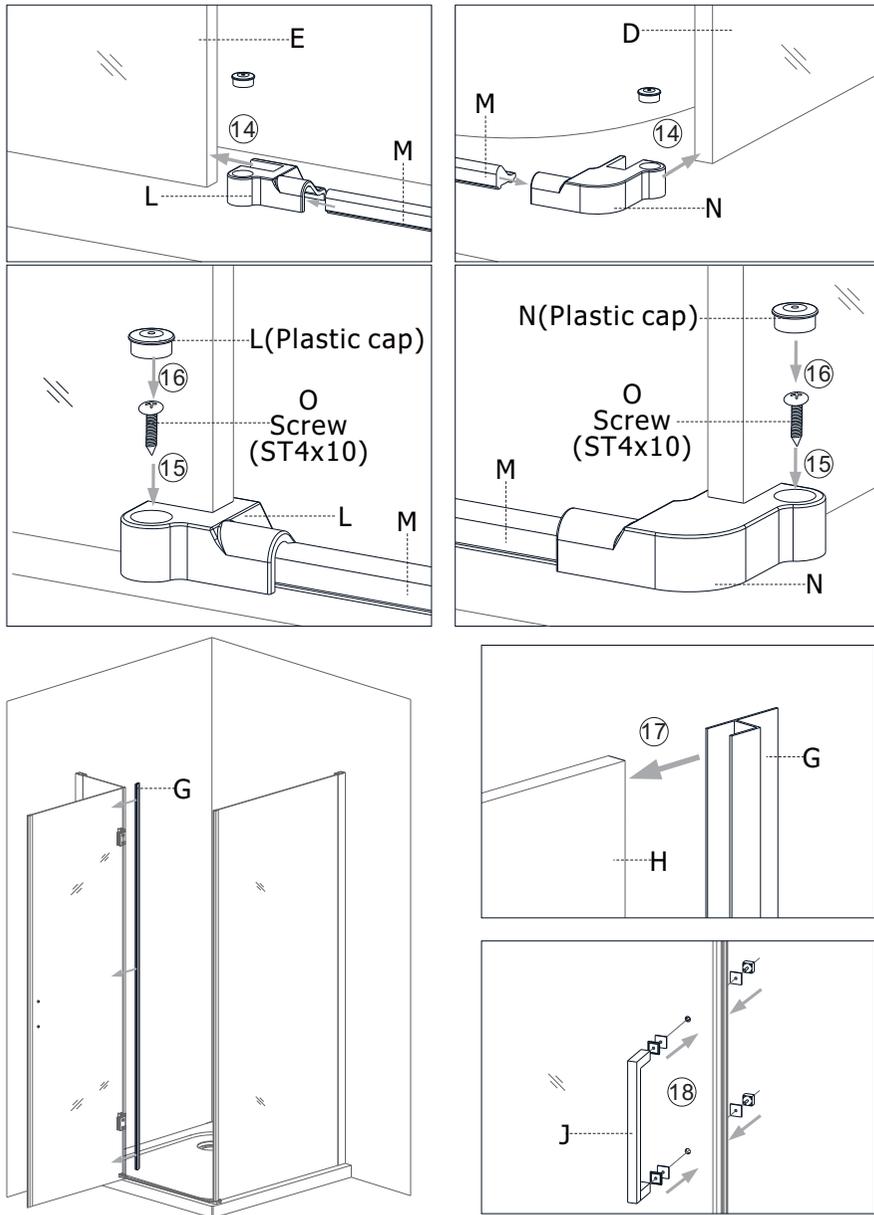


- 4.1) Two persons will be better for installation , please take up the open door ,and insert the hinge onto the fixed glass ,put well the gasket ,and then fasten the hinge by its screws ;Adjust well the location of aluminum door magnetic strip between open door and lateral door ,make sure it will be good .
- 4.2) Please put well the bottom aluminum doorsill ,drill the hole and fixe it by screw ,and then put the screw cap .
- 4.3) Please install well the waterproof seal and handle .

1) Part Lists

1.1) Product structure diagram

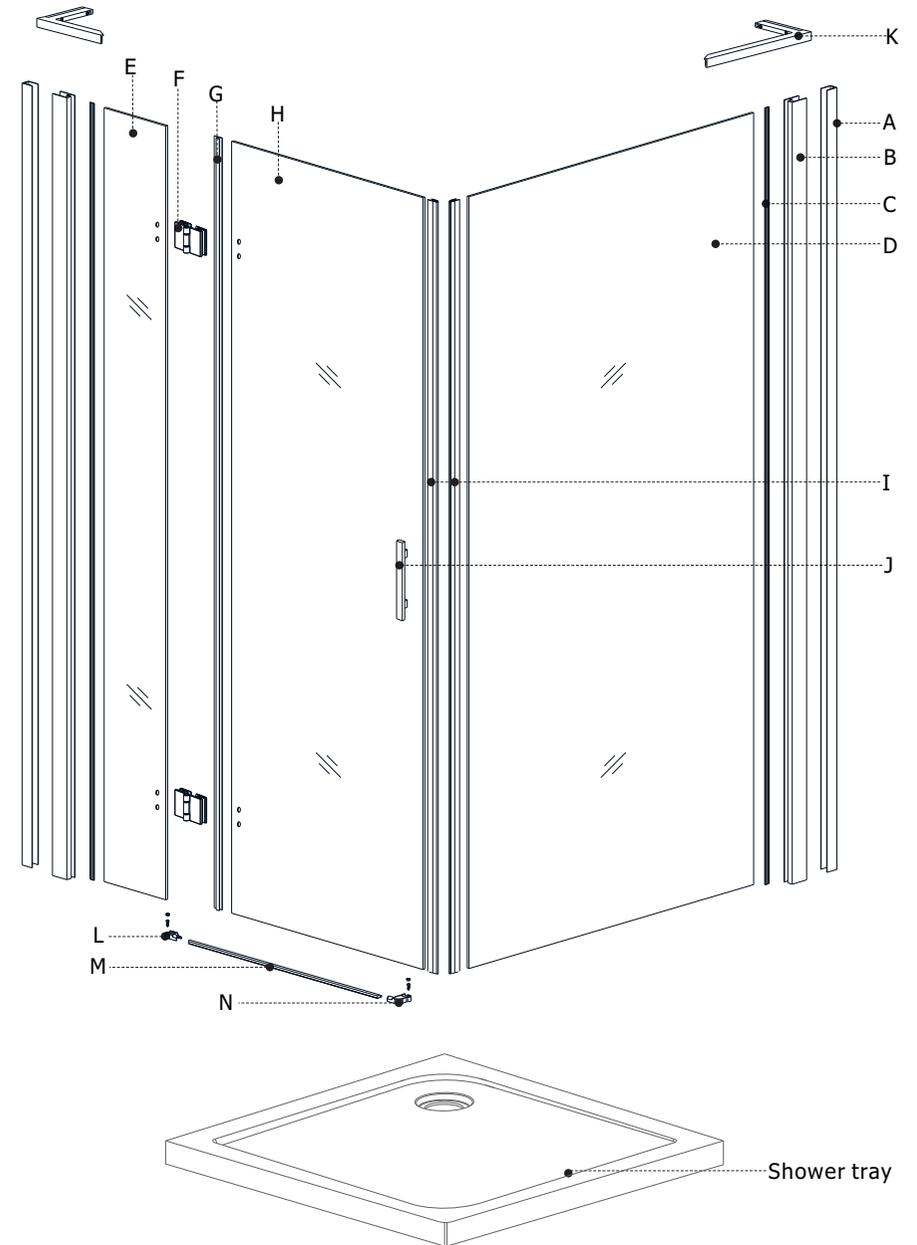


1.2) List of Spare Parts

 x2	 x2	 x2	 x1	 x1
Aluminum alloy interior casing	Aluminum frame	PVC Shape strap	Side glass	Fixed glass
A	B	C	D	E
 x2	 x1	 x1	 x2	 x1
Hingle	Waterproof seal	Open door glass	Magnetic strap	Handle
F	G	H	I	J
 x1+x1	 x1	 x1	 x1	 x2
L-shaped support	Plastic part 1	Aluminum weather bar	Plastic part 2	Fixed screw (ST4x10)
K	L	M	N	O
 x10	 x10	 x6	 x6	 x6
Fixed Screw (ST4x25)	Plastic stuffing	Plastic gasket	Fixed Screw (ST4x12)	Plastic cap
P	Q	R	S	T


1.3) Tools require

				
(a)	(b)	(c)	(d)	(e)
				
(f)	(g)	(h)	(i)	


* Some spare parts may have been installed already.
This list is for your information only.

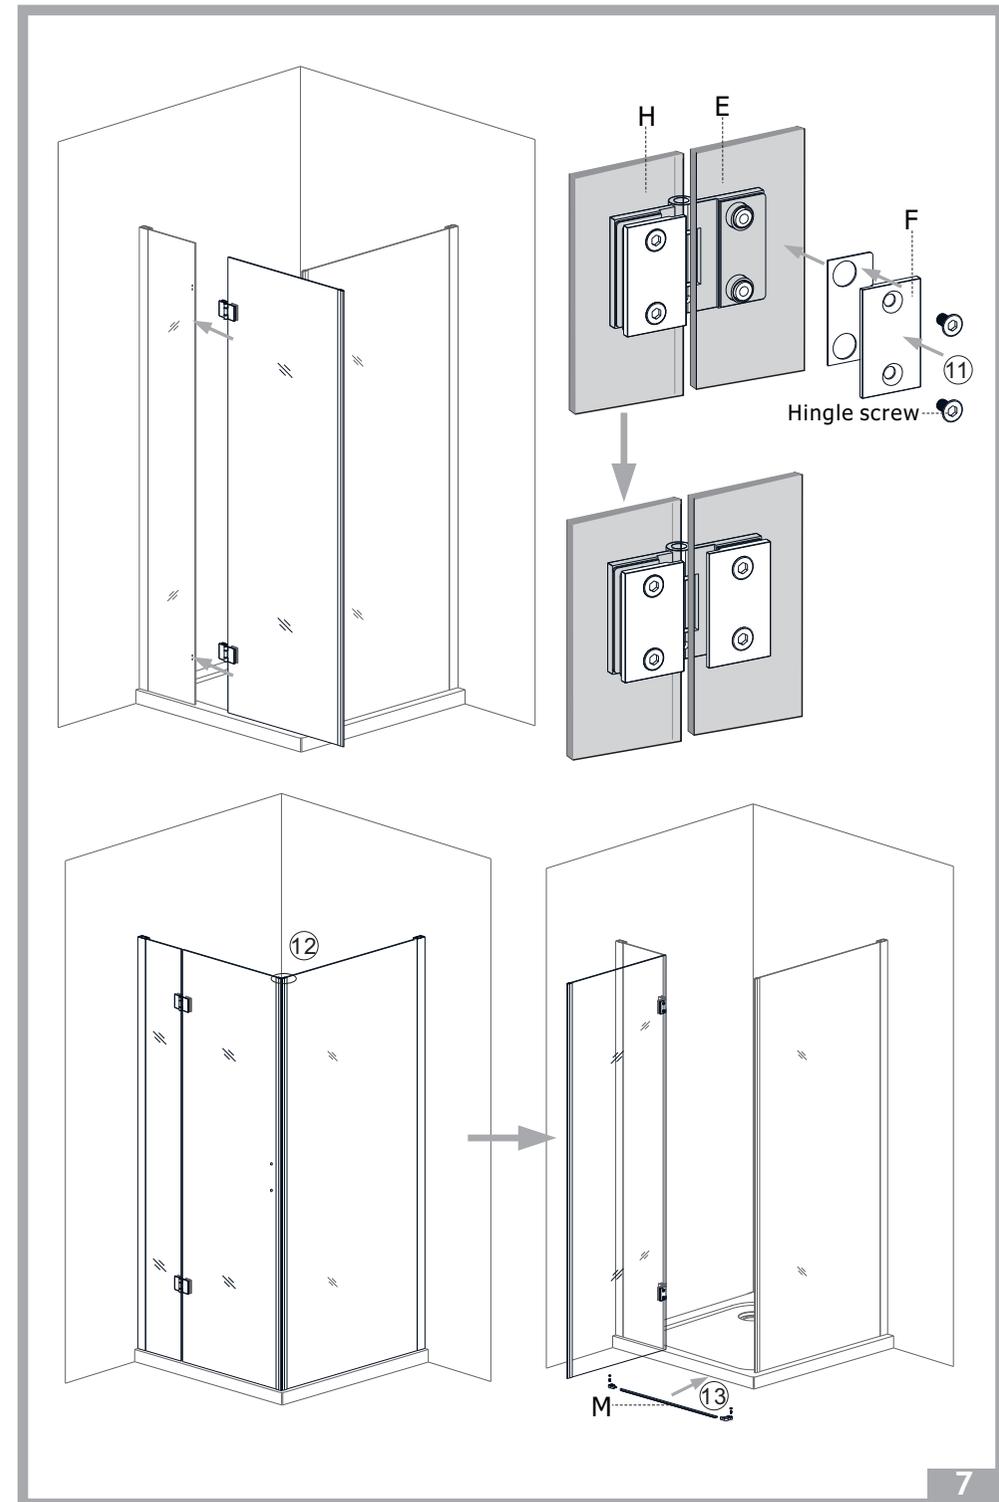


4) Installation of Open glass door and Hingle

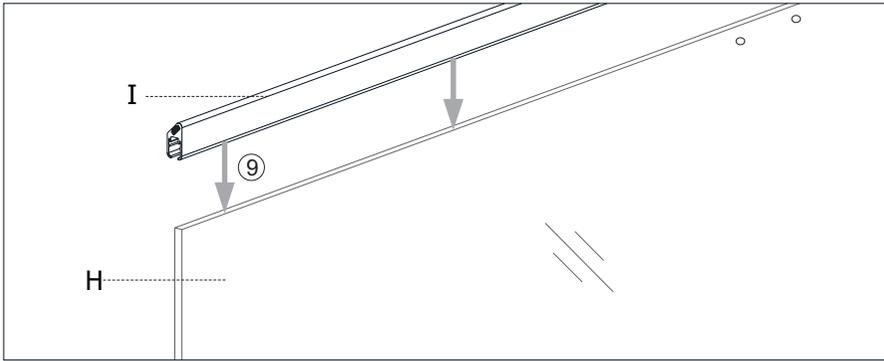


▲ Check the aluminum alloy door magnetic strip if installed well ;
Make sure it and then install the hinge on the open door .

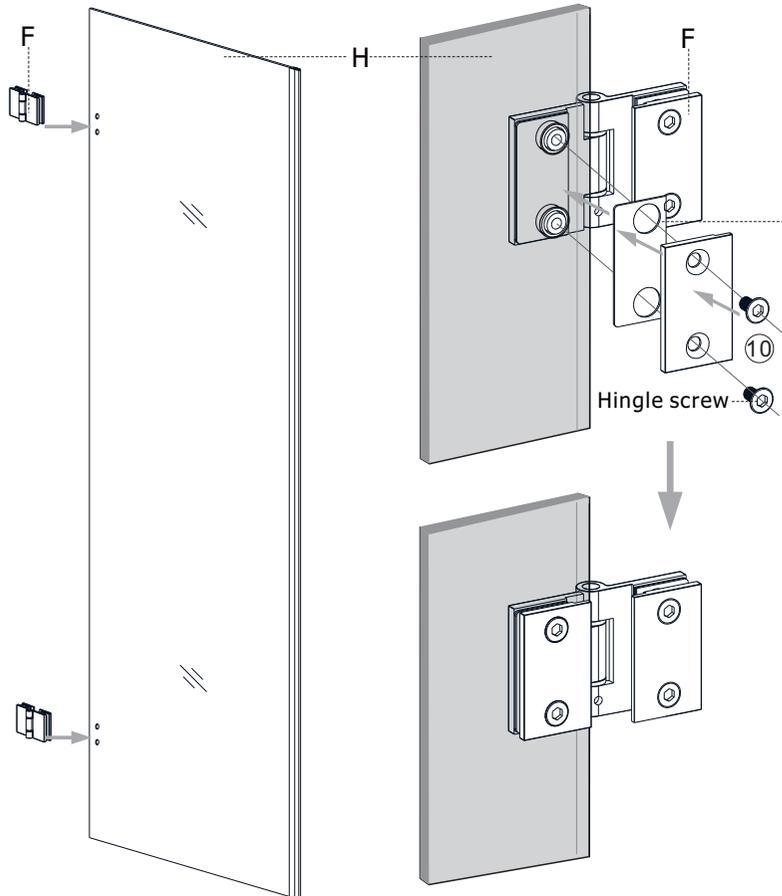


2) Determine the right place

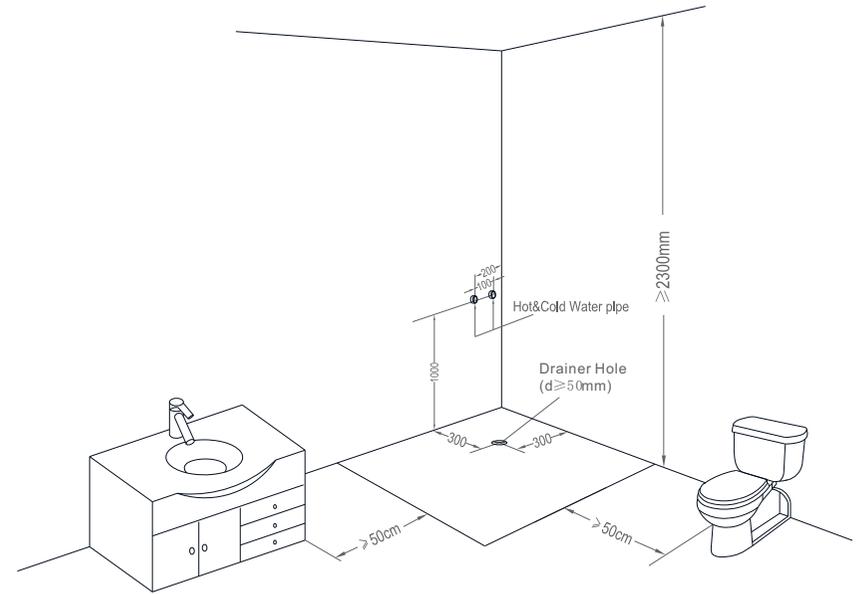

2.1) Drainer: try to make the drainer on top of the water outlet position; if it isn't possible to make sure, it should be set up at least 300mm in the water outlet, the diameter of water outlet should be less than 500mm.








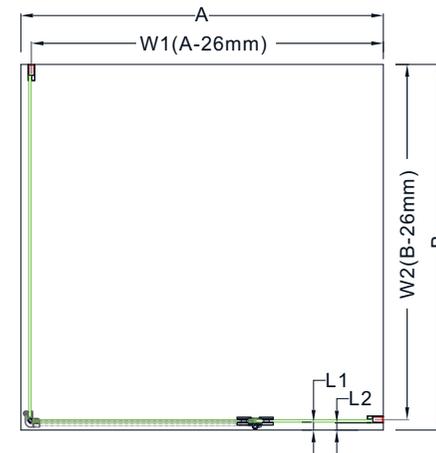


A x B	W1	W2	L1	L2
800x800	774	774	≈ 20mm	≈ 18mm
900x900	874	874		
1200x800	1174	774		
1200x900	1174	874		

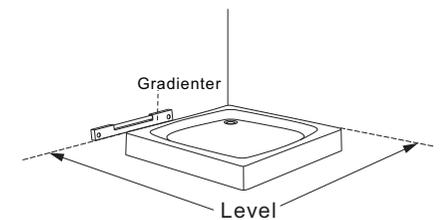


2.2) Check the drainer, if it is loose, please use glass glue to make it tight.
2.3) With the help of gradienter, adjust the adjustable legs to make the tray in level. Please make sure that each of bottom leg to contact the ground .

3) Fixed aluminum inter casing

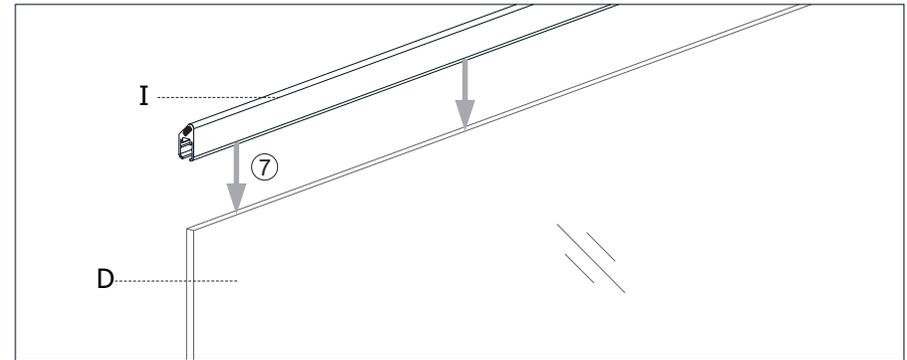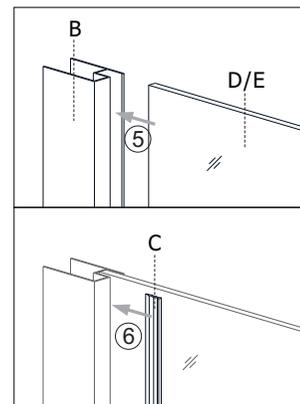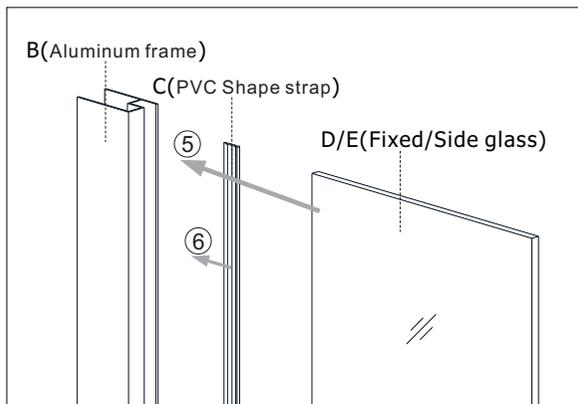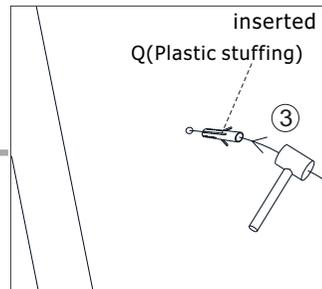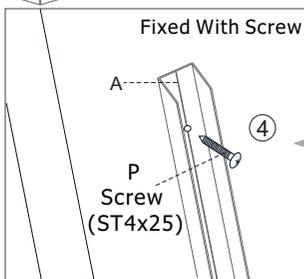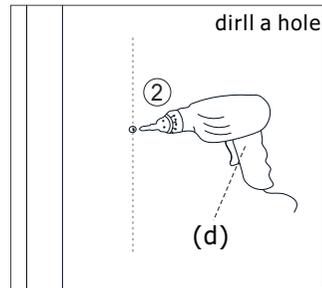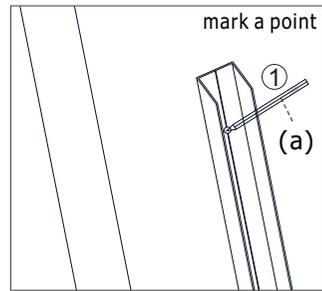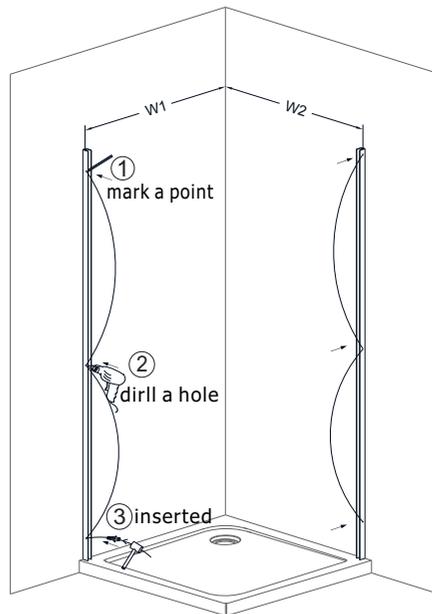

▲ This step may have been installed already.

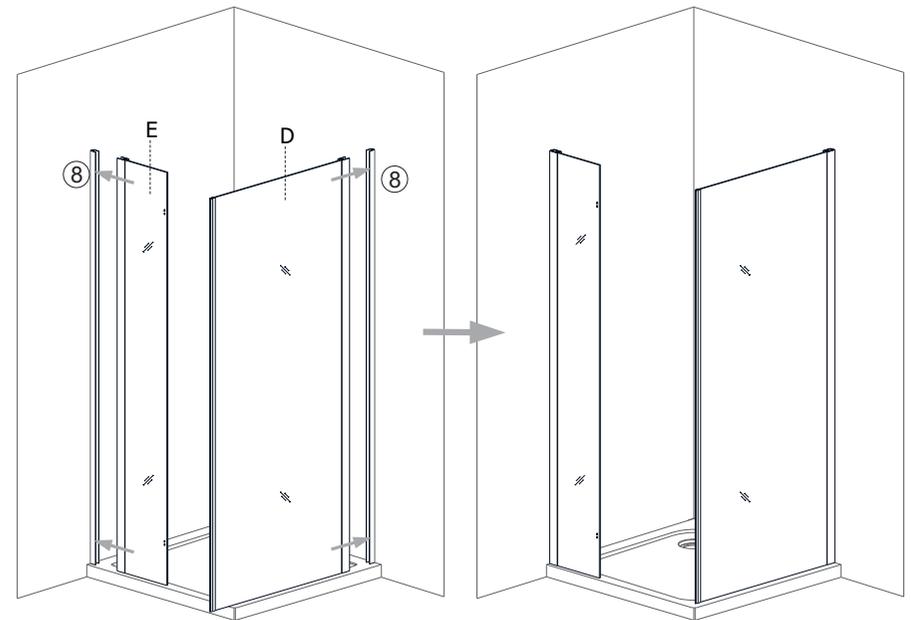

- 3.1) Check and confirm the installation location of profile A according to your selected product size and make marks for holes .
- 3.2) Making holes against the each side of wall by electric drill one by one ,and insert the setscrew into it ,and then fix the profile A on the wall .
- 3.3) Before insert profile B ,please insert the fixed glass D/E into the profile B and fixed it by single seal , for the lateral fixed glass , you need to insert the aluminum alloy door magnetic strip onto the glass (like the step 7 , if this has been done already ,please ignore it) .
- 3.4) Please insert the fixed glass into the related profile A , and make sure it will be smooth between the glass and bottom shower tray .